



FAULT LED CODES

If a system fault should occur, both lights will flash slowly.

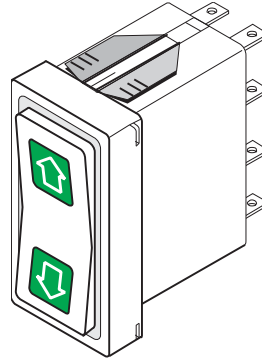

Placing the system in service mode (red showing) will display the diagnostic flash codes.

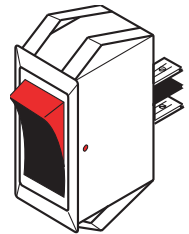

The codes are interpreted as follows:

- 3 flashes:** Left rear height sensor fault
- 4 flashes:** Right rear height sensor fault
- 5 flashes:** Pressure sensor fault (for systems fitted with an air reservoir)

You may also use the PC diagnostic tool available from Driverite at eng@driveriteltd.com to troubleshoot your system.

